
DELTA LEIGH


Driva-loc

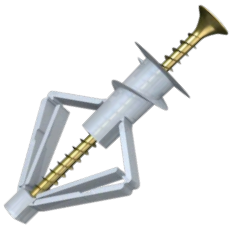





	Plasterboard Thickness		
	12.5mm		
Screw Head Diameter		mm	5.8
Screw Length		mm	60
Screw Diameter		mm	3.5
Plug Head Diameter		mm	15
Plug Length	Full extension	mm	50
Plug Length	When installed	mm	32
Rec. Tensile Load		kN	0.09
Max Rec. Load	Per fixing	Kg	9
Max Fixture Thickness	Maximum	mm	6
	Minimum	mm	5
Drill Diameter	Nominal	mm	10
Plasterboard Gap	Minimum	mm	46

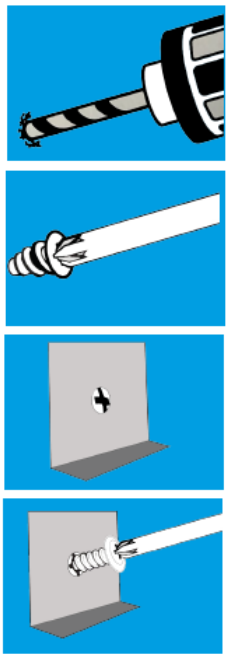

1. Carefully mark out where your drill holes are to be situated. Then using the smaller diameter 7.5mm HSS bit, drill a hole to the depth of the Rigifix Lite.

2. Using a Pozi No2 screw driver insert bit and slowly screw the Rigifix Lite in to your prepared hole ensuring a flush finish.

3. Offer up your fixture to the wall ensuring that both the fixture and the holes are in alignment.

4. Using the the screws provided attach your fixture making sure that you do not over tighten.

