

DELTA LEIGH


rigifix-lite


	Block Description/Density			
Axial Pull Out	**Thermalite**		Kg	100
	Concrete		Kg	130
Plasterboard Gap	**E**	Maximum	mm	25
		Minimum	mm	5
Drill Diameter	**F**	Nominal	mm	8
Drill Depth	**G**	Minimum	mm	75

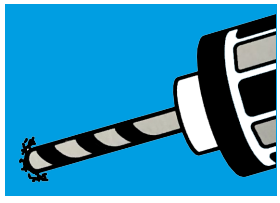

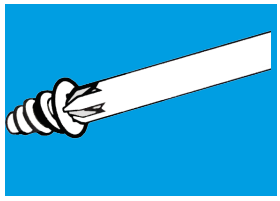



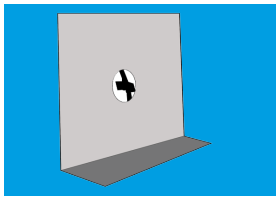

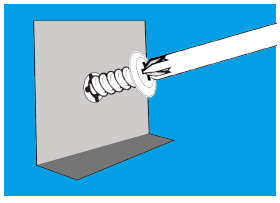

1. Carefully mark out where your drill holes are to be situated. Then using the smaller diameter 7.5mm HSS bit, drill a hole to the depth of the Rigifix Lite.

2. Using a Pozi No2 screw driver insert bit and slowly screw the Rigifix Lite in to your prepared hole ensuring a flush finish.

3. Offer up your fixture to the wall ensuring that both the fixture and the holes are in alignment.

4. Using the the screws provided attach your fixture making sure that you do not over tighten.

